

**LIST OF EFFECTIVE CHAPTERS**

Chapter Title	Date*
<b>GENERAL</b>	
Introduction	26.04.05
04 Airworthiness Limitations	28.10.05
05 Time Limits / Maintenance checks	18.01.06
06 Dimensions and Areas	26.04.05
07 Lifting & Shoring	27.09.01
08 Leveling and Weighing	27.09.01
09 Towing and Taxiing	01.10.01
10 Parking, Mooring, Storage & Return to Service	01.10.01
11 Placards and Markings	26.04.05
12 Servicing	26.04.05
<b>AIRFRAME SYSTEMS</b>	
20 Standard Practices Airframe	26.04.05
21 Ventilation and Heating	08.07.02
23 Communications	14.11.01
24 Electrical Power	26.04.05
25 Equipment and Furnishings	26.04.05
27 Flight Controls	01.03.02
28 Fuel	01.03.02
31 Indicating/Recording Systems	26.04.05
32 Landing Gear	15.03.02
33 Lights	18.05.02
34 Navigation	26.04.05
<b>STRUCTURES</b>	
51 Structures	22.03.02
52 Doors	14.05.02
53 Fuselage	14.05.02
55 Stabilizers	14.05.02
57 Wings	18.01.06
<b>PROPELLER</b>	
61 Propeller	26.04.05

**LIST OF EFFECTIVE CHAPTERS**

Chapter Title	Date*
POWER PLANT	
71 Power Plant	26.04.05
74 Ignition	29.10.01
75 Engine Cooling System	26.04.05
76 Engine Controls	26.04.05
77 Engine Indicating	26.11.01
78 Exhaust	07.11.01
79 Oil	07.11.01
80 Starting	05.11.01
91 Charts and Wiring Diagrams	26.04.05

\* The date refers to the issue / revision date of the respective chapter.